

7mm Transmission Removal

Les R. Elm © 2011


Have you ever seated a 7mm twist transmission too deep or seated a transmission that dose not work properly?

Now comes the question as to how to either re-seat the transmission or to completely remove the transmission?


No more using Transfer Punches to first remove the nib in order to get a punch to the transmission.

No more damage transmissions or pen bodies.

1. Place an appropriate sized Flat Washer over the transmission.
2. Install the transmission into a 1/4" Collet in a Beall Collet Chuck
3. Tighten the 1/4" collect around the transmission
4. Use two screwdrivers and evenly pry on opposite sides of the Flat Washer against the Collet Chuck to move the transmission out to where it needs to be re-seated or remove completely.

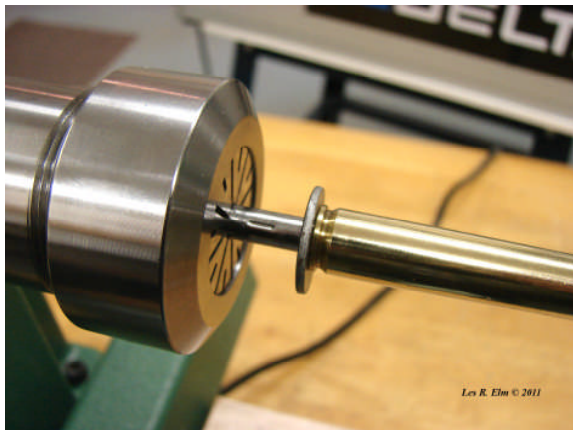

Install Transmission with Flat Washer

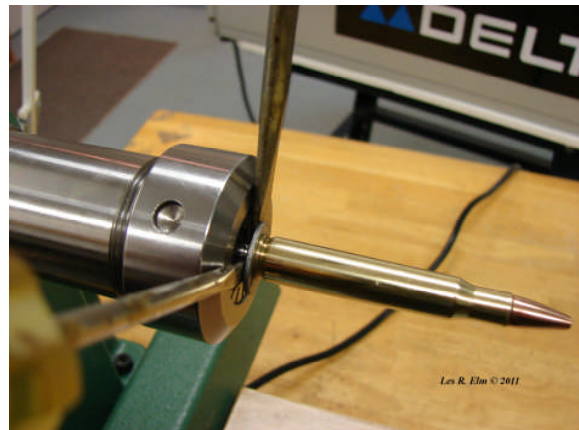

Pry Out Transmission with 2 Screwdrivers