



HERRINGBONE LAZER INLAY KIT

Take a six inch piece of 7/16" or larger dowel and sand it down so that the end assembly jig just fits on the dowel. Glue the end assembly jig about 1-1/2" from one end of the dowel. Only apply the glue to the flat side of the end assembly jig.

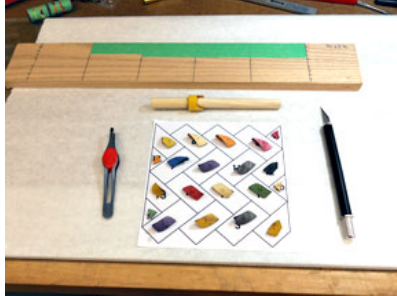


After the glue dries place a piece of the masking tape around the end assembly jig and begin to assemble the kit per the furnished instructions.

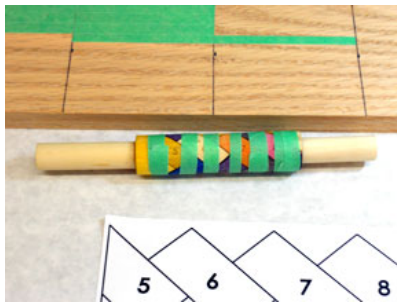


After the pieces are all assembled except for #19 and #20, remove the tape from the end assembly jig, slide the assembled pieces away from the jig and install and tape the last two pieces.



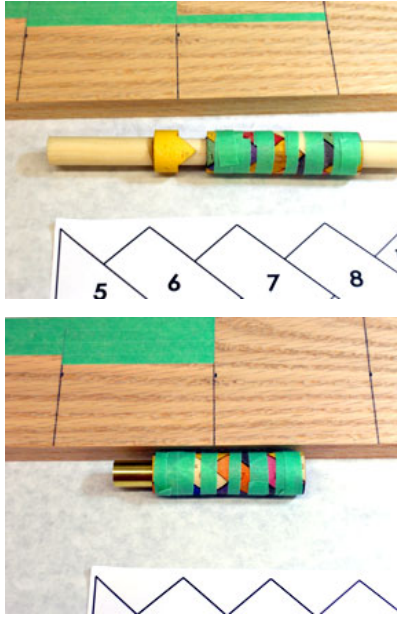

Remove the assembled kit from the dowel and slide a tube inside the kit. The tube is shorter than the assembled kit so you can place the assembly in a vice to compress the pieces together while you apply the final tape.

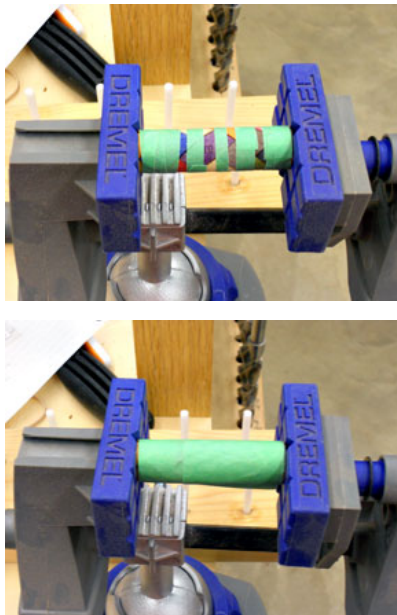

Follow the rest of the instructions for the Herringbone Lazer Kit.